

Bushnell[®]

CUSTOM[®]

SPOTTING SCOPE INSTRUCTION MANUAL

SETUP and OPERATION

Congratulations on the purchase of your Bushnell® spotting scope, a versatile high-performance spotting scope offering a wide range of terrestrial viewing.

MOUNTING THE SCOPE AND SETTING UP THE TRIPOD

Remove the spotting scope from its case. Spread out the tripod legs and place the tripod on a level surface. To extend the legs to the desired height, open a leg lock lever, pull the leg section out, then close the leg lever back down to lock the leg position. The tripod will be more stable if you extend the upper sections of the legs first, then use the lower leg sections as well if necessary. Once all the leg sections are fully extended, if you need more height, extend the center column as well. To do this, loosen the elevation height lock, turn the elevation crank handle, then retighten the height lock. Press the quick mount latch forward as far as it will go and hold it open. Lift the quick mount plate to remove it out of the mounting platform, then release the latch. Lift the wingnut handle on the bottom of the quick mount plate so that it stands straight out. Attach the quick mount plate bolt into the scope using the wingnut handle to turn the bolt until it is secure, but do not overtighten. Press the quick mount latch again and slide the quick mount plate (with scope attached) onto the tripod. Let go of the latch. If the latch does not close, reorient the plate until the plate lies flat within the tripod base.

CHANGING MAGNIFICATION

Grasp and rotate the zoom ring located at the base of the eyepiece to change the scope's magnifying power. When rotating this ring, the image appears to zoom in and out. It may be necessary to re-focus after the magnification has been changed.

FOCUSING

Rotate the focus knob located on the right side of the scope's body, in front of the eyepiece. By turning this adjustment, the image will sharpen until in focus.

USING THE PAN ARM TO MOVE THE SCOPE

To pan the scope side to side or up and down, first loosen the side and/or vertical lock. Then unlock the pan arm by rotating it counterclockwise and use it to move the scope as desired. To lock the scope in place, rotate the pan arm clockwise and tighten the side/vertical locks.

USING THE EYECUP AND SUNSHADE

If you wear eyeglasses, fold down the rubber eyecup if you have difficulty seeing the entire image. If the sun is at an angle to the scope rather than behind you, glare may be a problem, causing reduced image quality. If so, extend the sunshade out past the end of the scope.

CARE

The optics of your spotting scope are treated with special anti-reflective coatings for increased light transmission. As with any coated optics, special care must be taken in cleaning the lenses. Moisten the surface of the lens slightly and wipe dry using a circular motion starting at the center of the lens. Wipe or brush off any dirt or dust on the outside of the spotting scope.

CAUTION

Never disassemble your spotting scope. Special tools and equipment are required for service and irreparable damage can result from repair attempts by untrained persons. Unauthorized service may also void the warranty.



CAUTION: DO NOT LOOK AT OR NEAR THE SUN THROUGH THIS SPOTTING SCOPE, AS SEVERE DAMAGE TO YOUR EYES MAY RESULT !

PARTS GUIDE



Finish	Rubber armor, black
Lens Coating	Fully coated
Prism Type	BK-7
Prism System	Porro
Objective Diameter	60 mm
Exit Pupil (20x)	3.0 mm
Exit Pupil (60x)	1.0 mm
Field of View (20x)	115 ft @ 1000 yds
Field of View (60x)	52 ft @ 1000 yds
Eye Relief (20x)	16.5 mm
Eye Relief (60x)	13 mm
Close Focus (20x)	19.5 ft.
Close Focus (60x)	23.0 ft.
Weight	28.0 oz.
Length	14.0 in.
Height	5.9 in.
Tripod Height	44 in.
Other Accessories	Carrying case, cleaning cloth

* Quick Mount Plate-
attaching to scope



WARRANTY

LIFETIME LIMITED WARRANTY

We are so proud of our Bushnell® spotting scopes that their materials and workmanship are warranted to be free of defects for the life of the scope. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Bushnell Authorized Service Department.

Any return in the U.S. or Canada made under this warranty must be accompanied by the items listed below:

1. A check/money order in the amount of \$10.00 to cover the cost of postage and handling
2. Name and address for product return
3. An explanation of the defect
4. Proof of Date Purchased
5. Product should be well packed in a sturdy outside shipping carton, to prevent damage in transit, with return postage prepaid to the address listed below:

IN U.S.A. Send To:
Bushnell Outdoor Products
Attn.: Repairs
9200 Cody
Overland Park, Kansas 66214

IN CANADA Send To:
Bushnell Outdoor Products
Attn.: Repairs
140 Great Gulf Drive, Unit B
Vaughan, Ontario L4K 5W1

For products purchased outside the United States or Canada please contact your local dealer for applicable warranty information. In Europe you may also contact Bushnell at:

Bushnell Germany GmbH
European Service Centre
Mathias-Brüggen-Str. 80
D-50827 Köln
GERMANY
Tél: +49 221 995568-0
Fax: +49 221 995568-20

This warranty gives you specific legal rights.
You may have other rights which vary from country to country.

©2014 Bushnell Outdoor Products

Bushnell®