

Resetting The Adjustment Scale Ring on the Elite 4200 8-32X40 and 6-24X40

This step is not necessary, but, for future reference, you may want to realign the zero marks on the Adjustment Scale Rings with the Index Line after sighting in the riflescope.

1. While holding the Adjustment Scale Ring firmly with one hand use your other hand (or needle nose pliers if removing for the first time) to turn the Adjustment Scale Ring Retaining Screw counter clock-wise to loosen and remove. Take care not to disturb your zero by “losing” a click or two when loosening the screw.



2. Lift the Adjustment Scale Ring and align the “0” with the Index Line. Be careful when setting the ring back on that you do not lose any *clicks*, which may affect your targeting at next use.



3. Retighten the Adjustment Scale Ring Retaining Screw and reinstall the Elevation and Windage Adjustment Knobs.

